

# USER GUIDE

**GO! GO!**<sup>TM</sup>  
*nails*



## THANK YOU

On behalf of the entire team at Thane Direct, we appreciate your recent purchase of Go! Go!™ Nails.

Go! Go!™ Nails is a revolutionary new manicure and pedicure set that will keep your nails looking beautiful and healthy, wherever you are. We worked long and hard to make this device ideal for your manicure needs. After extensive testing, we added this product to our health & beauty collection for your home.

Enjoy your Go! Go!™ Nails ...  
and, once again, thank you!

## CONTENTS

INTRODUCTION .....	4
BENEFITS .....	5
SAFETY PRECAUTIONS .....	6
WARNING & CAUTION .....	7-8
TIPS .....	9
PARTS LIST .....	10
PRODUCT DIAGRAM .....	11
OPERATION .....	12-14
<i>How to Use</i> .....	12
<i>Recharging the Manicure Pen</i> .....	12-13
<i>Storage</i> .....	13
<i>Cleaning</i> .....	13
<i>Attaching and Removing the Heads</i> .....	14
TROUBLESHOOTING .....	15



## **INTRODUCTION**

Welcome to the ultimate process in easy nail care. Now you can keep your nails neat and looking beautiful with no effort at all. With the variety of attachments, Go! Go!™ Nails provides the ultimate professional spa nail care treatment in the comfort of your home, or wherever you travel.

## **BENEFITS**

We understand how hectic life can get and keeping up appearances can be very time consuming. Go! Go!<sup>™</sup> Nails was developed with your busy schedule in mind. Our design is very user-friendly and extremely easy to operate, leaving you more time in the day to get to the more important things in life. Compared to a professional manicure spa, Go! Go!<sup>™</sup> Nails takes less time and cost to acquire the same results. Go! Go!<sup>™</sup> Nails is the ideal product to get the results you want, when it's convenient for you.

Go! Go!<sup>™</sup> Nails is designed to keep your nails neat and looking beautiful, utilizing the full range of attachments that come with the Manicure Pen. These attachments are perfect for a variety of purposes, such as trimming, shaping, polishing and keeping your nails healthy.

## **SAFETY PRECAUTIONS**

As with any electrical device, please take the following precautions when operating this beauty aid and read all instructions before using.

- 1) To reduce the risk of death or serious injury from electrical shock:
  - Do not immerse the device in water. Unplug it immediately if it comes in contact with water.
  - Do not use in the bath or shower.
  - Always unplug the device after using or before cleaning.
- 2) Use this appliance only for its intended use as described in this manual and do not use any attachments not recommended by the manufacturer.
- 3) Never leave the device unattended when plugged into an electrical outlet, and keep the device away from any heated surfaces.
- 4) Never operate if the electrical cord or plug is damaged or has come in contact with water.
- 5) Do not drop or insert any foreign objects into the rotating head.

 **WARNING**

- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Close supervision is necessary when this appliance is used by individuals with disabilities.
- Adult supervision is necessary when used on or by children.
- Not for use on animals.
- Do not place appliance on any surface while it is operating.
- Do not apply excessive pressure when performing treatment. Applying too much pressure will reduce the effectiveness of the treatment. The motor is geared to either stop or slow significantly if too much pressure is applied.
- Should this product malfunction, do not attempt to repair it. This appliance has no user-serviceable parts or components.
- Always switch the appliance 'OFF' when not in use and disconnect from the electrical outlet before adding or removing attachments.

 **CAUTION**

- Consult a physician before using this product if you have any medical condition.
- Discontinue use of this product immediately if you experience any pain or discomfort.
- Do not share accessories with others. If you do, make sure to sanitize them before use.

**CAUTION** - continued



- Do not use the unit on sores, injured areas, or open wounds.
- Do not operate with damp, wet, or moist hands.
- Over buffing or grinding will damage the nails and skin.
- Do not remove attachments once the unit is in use.
- For external use only.


## TIPS

- Read the manual to familiarize yourself with the product.
- Give yourself some time to determine the best motion for best results.
- Turn the unit off when not in use to conserve battery power.
- We do not recommended sharing the Manicure Pen with others as doing so could pose a health hazard.
- Remove old nail polish from nails before use.
- Soak your hands in a bowl of warm water for five minutes in order to soften your cuticles and nails. Make sure your hands are dry before use.

## PARTS LIST

Go! Go!™ Nails comes equipped with a variety of convenient attachments to help you get the nails you've always dreamed of.

1. Manicure Pen – Comes with two speeds for an effective and more personalized treatment. Please refer to the next section for operating instructions.

 **Note:** For first time users, we recommended that you use the lower speed in order to avoid injury.

2. Charger – Charges the Manicure Pen. Once the unit is charging, the LED light will turn red. Please refer to the next section for further instructions on how to charge the Manicure Pen.

3. Diamond Disc – Shortens, shapes and files your nails.

4. Bullet Shaped Cone – Eliminates dead skin around the cuticle area of your nails.


5. Tapered Cone – Effectively removes dead skin and treats ingrown nails by moving the tapered cone point from the outside towards the inside of the nail.

6. Polishing Cone – Provides a perfect, smooth finish, making your nails look beautiful and healthy.

7. Thick Pointed Stone – Files and treats the surface of thick toe nails.

8. Ball Pointed Cone – Files and treats the surface of both thick toe nails and finger nails.

## PRODUCT DIAGRAM

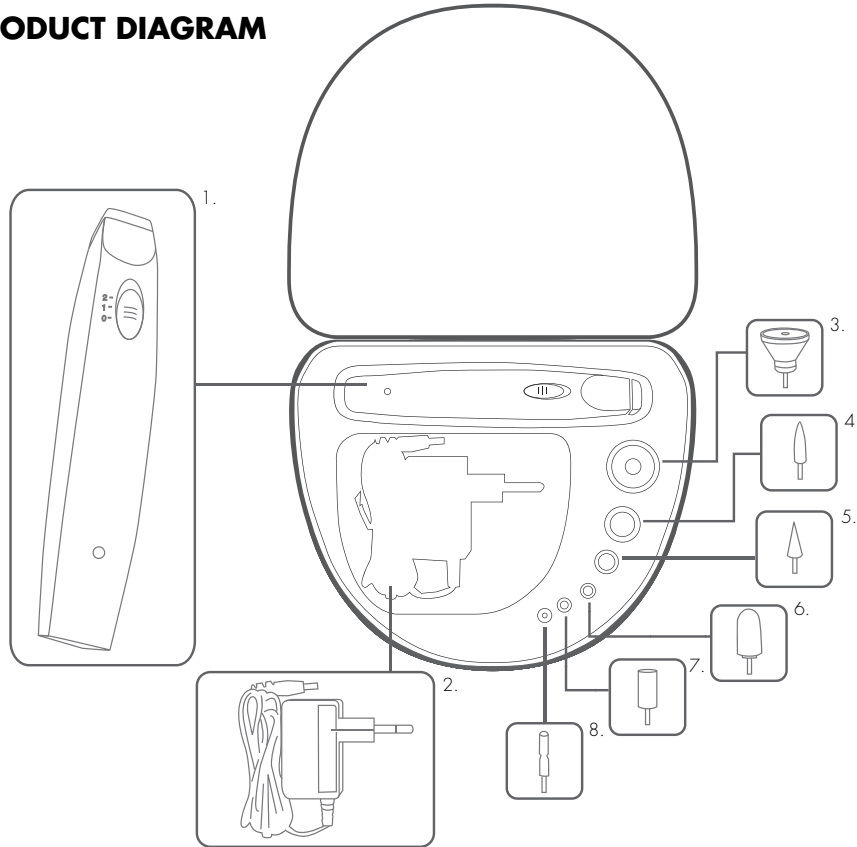

## **OPERATION**

### ***How to Use***

1. Ensure that the Manicure Pen is fully charged before use. To charge, insert the adapter jack into the end of the Manicure Pen and simply plug into the electrical outlet. The LED light will indicate the Manicure Pen is charging.
2. Choose one of the six interchangeable attachments for its appropriate use, and insert into the end of the Manicure Pen. To remove, gently pull the attachment from the Manicure Pen.
3. Start the treatment by operating the 2-speed switch.

**!** **Note:** For first time users, we recommend using the lower speed to treat sensitive areas around your nails.

**!** **Note:** For better performance and results do not wash your hands before treatment. Wash after treatment and massage in a moisturizer to soften and soothe your skin.

### ***Recharging the Manicure Pen***

To recharge the Manicure Pen, simply turn the switch to (O) OFF position and plug the connector of the power supply cord into the jack at the bottom of the Manicure Pen.

Next, plug the power supply cord into an electrical outlet to start recharging. The LED on the Manicure Pen will light up to indicate that the Manicure Pen is Recharging. **It takes about eight hours to charge batteries fully.**

**! Note:** After the batteries are fully charged the indicator light will continue to illuminate. Please note that due to limited space this unit is not equipped with an automatic shut off switch and the indicator light will not change its color once the batteries are fully charged.

After recharging the Manicure Pen, remove the power supply plug from the outlet, and then pull the connector out of the cord jack on the bottom of the Manicure Pen before using.

**! Note:** To maintain the life of your batteries, allow them to drain completely before charging them again.

**Charging it for longer than the recommended time may decrease battery life.**

### **Storage**

After use, remove the attachment head and store in the GO! GO!<sup>™</sup> Nails container. Make sure that the container is dry; otherwise damage may occur to the Manicure Pen. Unplug the cord at the end of the Manicure Pen and store the adapter in the GO! GO!<sup>™</sup> Nails container.

**! Note:** Avoid tangling the cord around the adapter. Doing so may damage the cord.

### ***Cleaning***

Always unplug the appliance from the electrical outlet after use and before cleaning.

To clean, wipe the appliance with a damp cloth. Ensure the appliance is completely dry before use.

### ***Attaching and Removing the Heads***

Gently press the shaft of the head into the hole on the nose of the Go! Go!™ Nails unit until it feels secure.

To remove the head, gently slide the head out of the Manicure Pen. Please do not use any tools.

**! Note:** Do not hammer or use any tools on the head, as this may damage both the head and the Manicure Pen.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE & SOLUTION
Not charging when connected to the adapter.	Loose plug or low battery. Re-plug the adapter or contact the distributor for repair of the Manicure Pen.
Cannot open storage space	Cover is locked. Push the plastic switch to the right, and then try again.
Cannot open the adapter cover.	Cover is locked. Push the bottom plastic pin inward and lift
Rotating speed is low and motor strength is weak	The battery is low. Recharge the battery. Please consult the "Recharging the Manicure Pen" section in this manual.
Attachment is not abrasive	The attachment is worn-out. Contact the distributor for a possible component replacement.
Attachment does not have a firm connection with the motor shaft.	The ring on the motor shaft has lost its elasticity and is unable to hold the attachment firmly. Contact the distributor for a possible component replacement.

**GO! GO!**<sup>™</sup>  
*nails*

Distributed By:

Thane International, Inc.,  
La Quinta, CA 92253  
[www.thane.com](http://www.thane.com)

Thane Direct Canada, Inc.,  
Mississauga, ON  
[www.thane.ca](http://www.thane.ca)

Thane Direct UK. Ltd.,  
Admail ADM3996,  
London, W1T 1ZU  
[www.thanedirect.co.uk](http://www.thanedirect.co.uk)



Copyright © 2010 Thane International, Inc.

DSENG 01/04/11